


OGS1822 Akku-Gras-Strauchscherer XXX

5133002830 - OGS1822 - 4000462044





4000462044

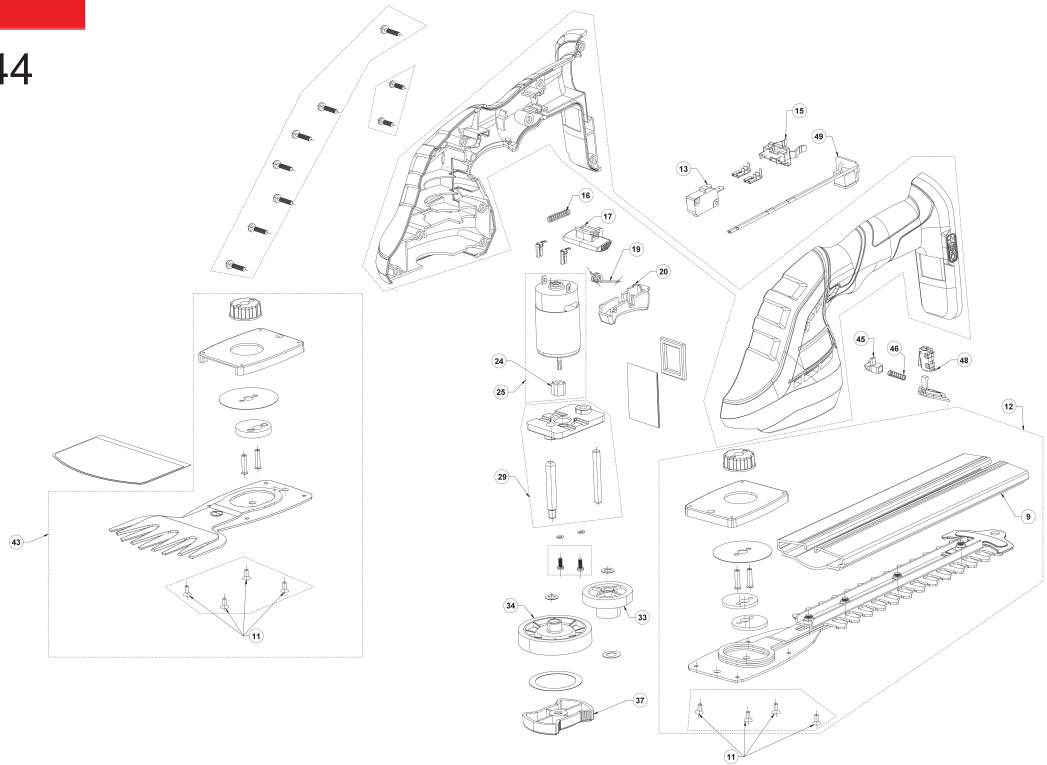

Position	Quantity	Description	Part number	EAN
1009 1	1	KLINGE	5131009078	4058546044954
1011 2	8	SCHRAUBE	5131011398	4058546044947
1012 3	1	HECKENSCHERBLATT	5131048739	4058546548681
1013 4	1	SCHALTER	5131016262	4058546103675
1015 5	1	PLATTE	Item discontinued(5131008325)	
1016 6	1	FEDER	Item discontinued(5131016193)	
1017 7	1	DRUECKER	5131039518	4058546043766
1019 8	1	FEDER	Item discontinued(5131011722)	
1020 9	1	DRUECKER	5131039519	4058546043773
1024 10	1	ZAHNRAD	5131039520	4058546043780
1025 11	1	MOTOR	Item discontinued(5131006711)	
1029 12	1	MOTORTRAEGER	5131008434	4058546092719
1033 13	1	ZAHNRAD	Item discontinued(5131009074)	
1034 14	1	ZAHNRAD	Item discontinued(5131009073)	
1037 15	1	KNOPF	5131008432	4058546044909
1043 16	1	GRASSCHERENMESSER	5131048740	4058546548698
1045 17	1	SCHIEBER	5131039521	4058546043797
1046 18	1	FEDER	5131034745	4058546143381
1048 19	1	SCHALTER	Item discontinued(5131039522)	
1049 20	1	ELEKTRONIK	5131039523	4058546043810