


RY18SCXA-0 AKKU-GARTENSCHERE XXX

5133005025 - RY18SCXA-0 - 4000475643



RYOBI

4000475643

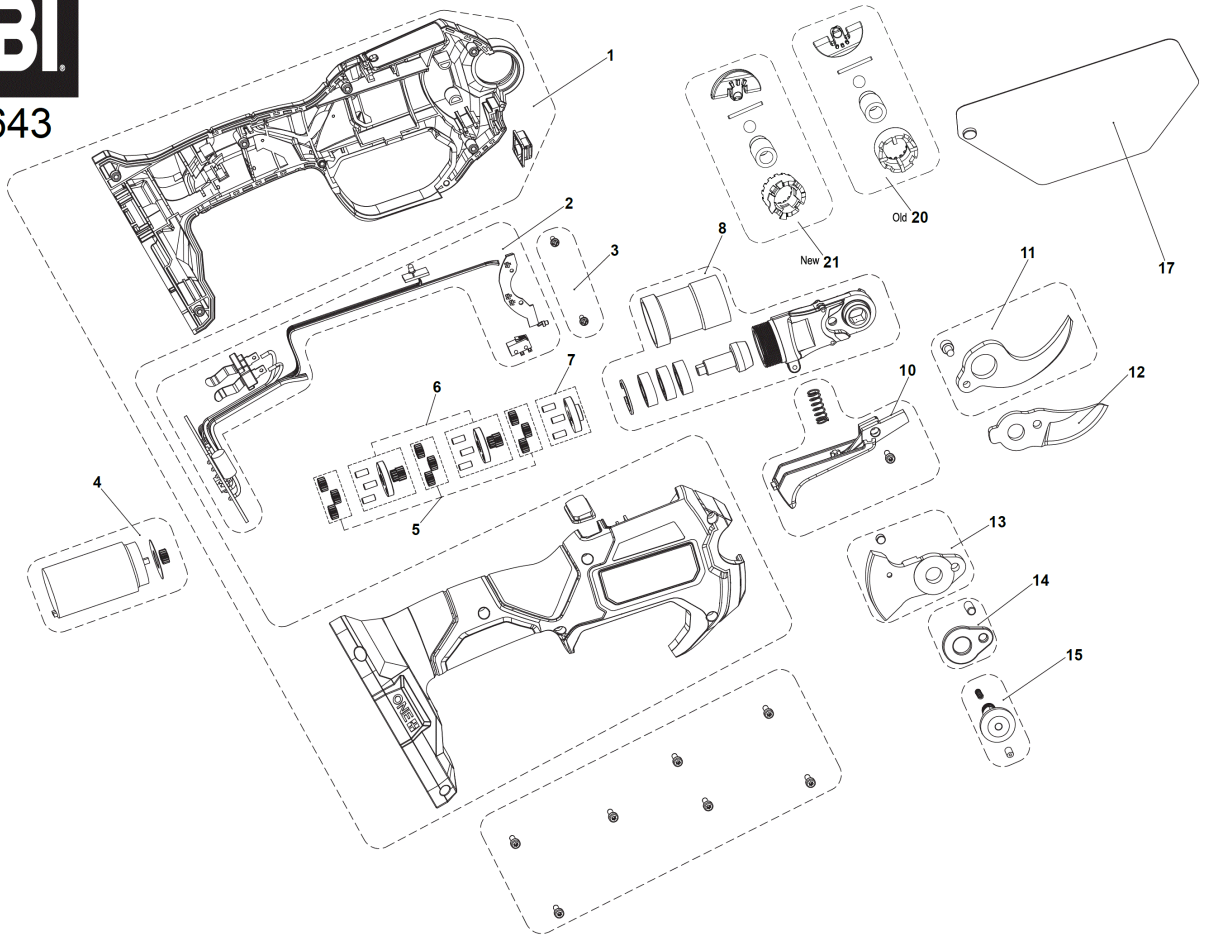

Position	Quantity	Description	Part number	EAN
1001 1	1	GEHAEUSE	5131045210	4058546401313
1002 2	1	ELEKTRONIK	5131045211	4058546401320
1003 3	2	SCHRAUBE	5131045212	4058546401337
1004 4	1	DC-MOTOR	5131045213	4058546401344
1005 5	9	ZAHNRAD	5131044727	4058546384500
1006 6	2	GETRIEBESATZ	5131045214	4058546401351
1007 7	1	ZAHNRAD	5131045215	4058546401368
1008 8	1	GETRIEBEGEHAEUSE	5131049237	4058546606404
1010 9	1	DRUECKER	5131045218	4058546401399
1011 10	1	KLINGE	5131045219	4058546401405
1013 11	1	LAGERHALTER	5131045220	4058546401412
1014 12	1	SCHEIBE	5131045221	4058546401429
1015 13	1	BEFESTIGUNGSBOLZEN	5131045222	4058546401436
1017 14	1	MESSERSCHUTZ	5131045223	4058546401443
1020 15	1	GETRIEBEKOPF	5131049238	4058546606411
1021 16	1	GETRIEBEKOPF	5131049239	4058546606428
1012 17	1	RYOBI Ersatzklinge fuer Gartenschere	5132005105	4892210196996