


RR14W4-0 AKKU-RATSCHENSCHRAUBER XXX



5133006311 - RR14W4-0 - 4000486744



RYOBI®

4000486744

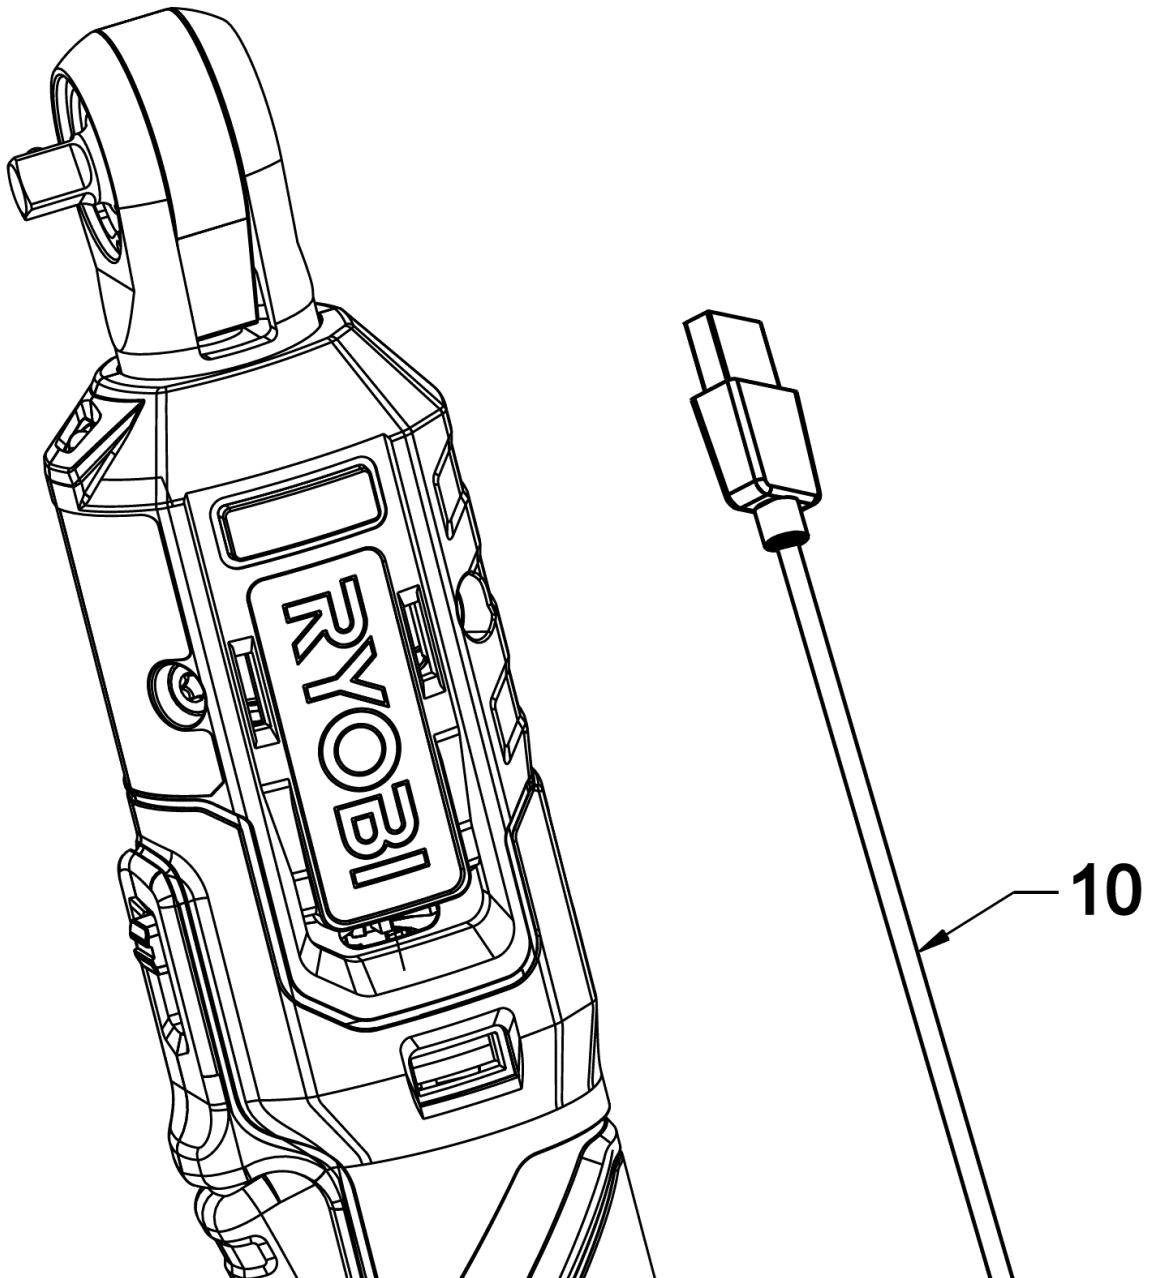

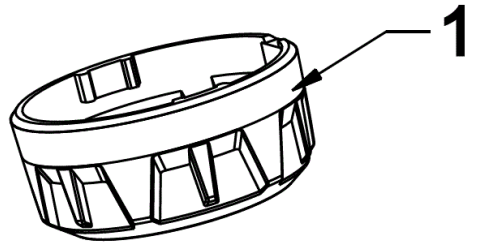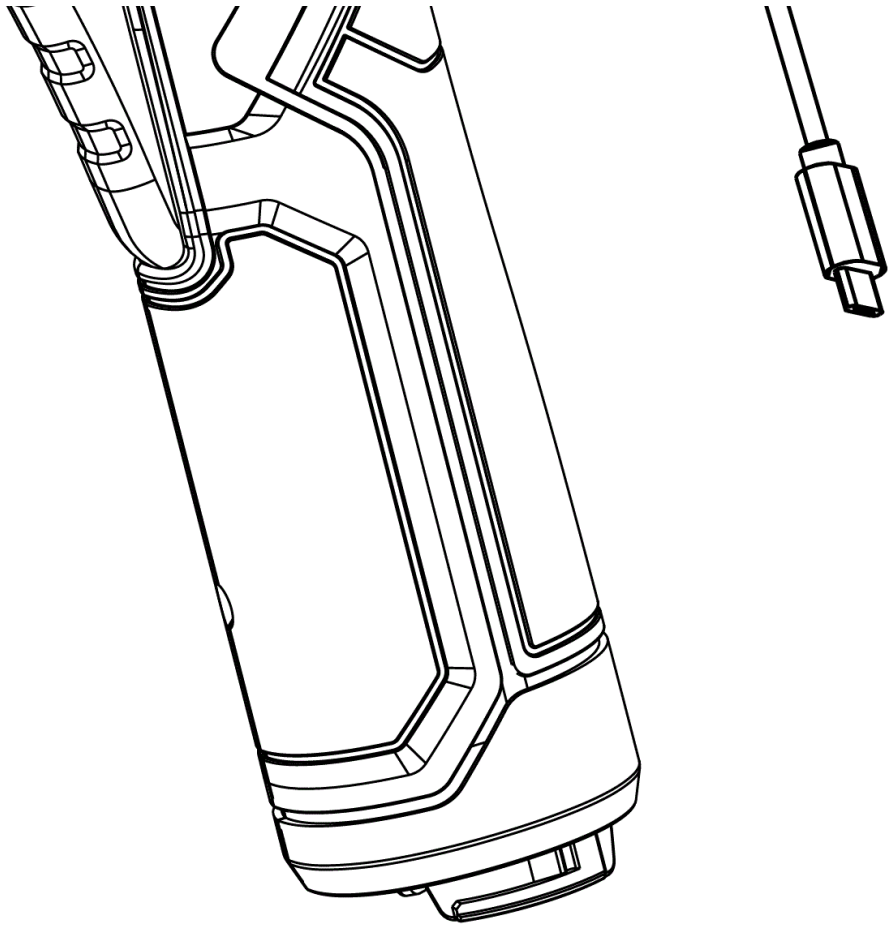

Position	Quantity	Description	Part number	EAN
1001 1	1	DECKEL	5131047617	4058546502539
1010 2	1	USB KABEL	5131047409	4058546500467