

AKKU-RADIO JSR1228 IN2

49240285 - JSR1228 - 4000393445



Position	Quantity	Description	Part number	EAN
0002 1	1	LCD PCB ASSY	Item discontinued(22091670)	
0003 2	1	LAUTSPRECHER	Item discontinued(22091548)	
0005 3	1	Ersatzteil fuer Radio	Item discontinued(22091651)	
0006 4	1	Ersatzteil fuer Radio	Item discontinued(22560850)	
0007 5	1	KABELSATZ	Item discontinued(22641090)	
0008 6	2	LAUTSPRECHER	Item discontinued(23452025)	
0009 7	2	LAUTSPRECHER	Item discontinued(23452100)	
0010 8	1	KONTROLLVORR.	Item discontinued(23660740)	
0011 9	1	TRANSFORMATOR	Item discontinued(23810570)	
0013 10	1	GRUNDPLATTE	Item discontinued(31060200)	
0014 11	1	LAUTSPRECH.-BUEG.RE	Item discontinued(31100320)	
0015 12	1	LAUTSPRECH.BUEG.LI.	Item discontinued(31100325)	
0016 13	2	LAUTSPRECH.-HALTER	Item discontinued(31100330)	
0018 14	1	LAUTSPRECH.-HALTER	Item discontinued(31100370)	
0019 15	1	LAUTSPRECH.-HALTER	Item discontinued(31100375)	
0020 16	1	Ersatzteil fuer Radio	Item discontinued(31100390)	
0021 17	1	PLATTE	Item discontinued(31120320)	
0022 18	1	DECKEL	Item discontinued(31150725)	
0023 19	1	BATTERIE	Item discontinued(31152100)	
0024 20	1	KLEMME	Item discontinued(31170420)	
0025 21	1	GEHAEUSE	Item discontinued(31500925)	
0026 22	1	LAUTSPRECHER	Item discontinued(31500996)	
0027 23	1	GEHAEUSE	Item discontinued(31501195)	
0028 24	1	TRANSFORMATOR	Item discontinued(31501560)	
0029 25	1	TRANSFORMATORGEHAEUSE	Item discontinued(31501565)	
0032 26	1	BATTERIE	Item discontinued(31152095)	
0033 27	2	RING	Item discontinued(31580610)	
0034 28	4	DISTANZSCHEIBE	Item discontinued(31860250)	
0035 29	2	RETAINING RING	Item discontinued(34802025)	
0036 30	2	FEDER	Item discontinued(40500670)	
0038 31	1	ANTENNE	Item discontinued(42091005)	
0042 32	1	ABSAUGSTUTZEN	Item discontinued(42380270)	
0043 33	1	ABSAUGSTUTZEN	Item discontinued(42380275)	
0044 34	1	POTENTIOMETER	Item discontinued(42420500)	
0045 35	1	KISSEN	Item discontinued(42420520)	
0046 36	1	KISSEN	Item discontinued(42420530)	
0047 37	2	GRIFF	Item discontinued(42820100)	
0048 38	1	LAUTSPRECHER	Item discontinued(43520080)	
0049 39	1	HANDGRIFF	Item discontinued(43621325)	
0050 40	2	HAKEN	Item discontinued(43740275)	
0051 41	1	KNOPF	Item discontinued(43980540)	
0052 42	1	KNOPF	Item discontinued(43980545)	
0056 43	1	Ersatzteil fuer Radio	Item discontinued(44200625)	
0059 44	1	RIEGEL	Item discontinued(44201075)	
0060 45	1	Ersatzteil fuer Radio	Item discontinued(44201045)	
0065 46	1	SCHRAUBE	Item discontinued(44340290)	
0066 47	1	Ersatzteil fuer Radio	Item discontinued(44520800)	
0068 48	1	KISSEN	Item discontinued(44520765)	
0069 49	1	KISSEN	Item discontinued(44520770)	
0070 50	2	KISSEN	Item discontinued(44520810)	

Position	Quantity	Description	Part number	EAN
0073 51	1	KISSEN	Item discontinued(44520920)	
0078 52	1	ANTENNE	Item discontinued(44661050)	
0079 53	1	Feder	Item discontinued(44860290)	
0081 54	1	DICHTUNG	Item discontinued(45060870)	
0083 55	1	DICHTUNG	Item discontinued(45060850)	
0084 56	1	STECK-SCHL.-EINSATZ	Item discontinued(45340170)	
0085 57	1	STECK-SCHL.-EINSATZ	Item discontinued(45340160)	
0086 58	1	ABDECKUNG	Item discontinued(45563000)	
0087 59	1	STUETZROLLE	Item discontinued(45600630)	
0088 60	1	STUETZROLLE	Item discontinued(45600635)	
0089 61	1	VERBINDUNGSSTUECK	Item discontinued(45760440)	
0090 62	1	VERBINDUNGSSTUECK	Item discontinued(45760445)	
0091 63	8	SCHEIBE	Item discontinued(45880880)	
0094 64	2	SCHEIBE	Item discontinued(45880980)	
0095 65	1	SCHEIBE	Item discontinued(45881600)	
0096 66	7	SCHEIBE	Item discontinued(45881625)	
0110 67	1	KANALPLATTE	Item discontinued(22560635)	
0111 68	1	DRAHT	Item discontinued(23780100)	